




# Cotton Tipped Applicator

Double Small Tip, Fine Paper Handle

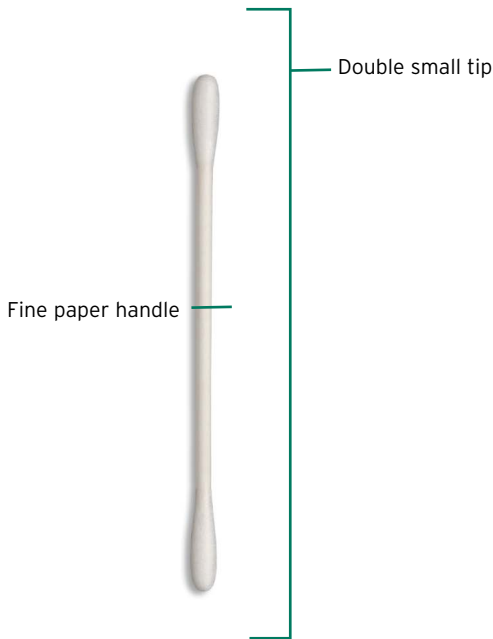

## Description

This double cotton-tipped applicator is produced with high quality USP grade cotton. It is bonded securely to a paper handle by an aqueous based adhesive. It is lint and residue free, making it an ideal applicator for cleaning sensitive components.

## Dimensions

**3.07" Overall Length (78 mm)**

### Tip

- 0.17" Dia. (4.4 mm)
- 0.59" Length (15 mm)

### Handle

- 0.097" Dia. (2.46 mm)
- 3" Length (77.5 mm)

## Qualities

- Double small tip
- Fine paper handle
- Highly absorbent, does not swell in solvents
- Lint and residue free
- Low in NVR
- No silicone
- Anti-static packaging

## Applications

- Cleaning sensitive components
- Cleaning disk drives, optics, computer parts, etc.
- Precision application of solutions or adhesives
- Health & beauty
- Veterinary
- Weapons cleaning

Ref #	Packaging
893-PC DBL Non-sterile	100/25 (100 sleeves per case of 25 swabs per sleeve = 2,500/ cs)



**Puritan®**



# Cotton Tipped Applicator

Double Small Tip, Fine Paper handle

Ref #: 893-PC DBL

## Report of Analysis: NVR/Ion/Silicone Oil

Parameter	Result	Unit	Specification
1. Chloride	2.206	µg/ tip	< 8.5
2. NVR (DI)	0.278	mg/ tip	< or = 0.53
3. NVR (IPA)	0.042	mg/ tip	< or = 0.15
4. NVR (Acetone)	0.113	mg/ tip	< or = 0.55
5. Silicone Oil	-	ng/ tip	< 1.3



**Puritan**<sup>®</sup>